


# SW-812 & SW-1212 Programming Menu

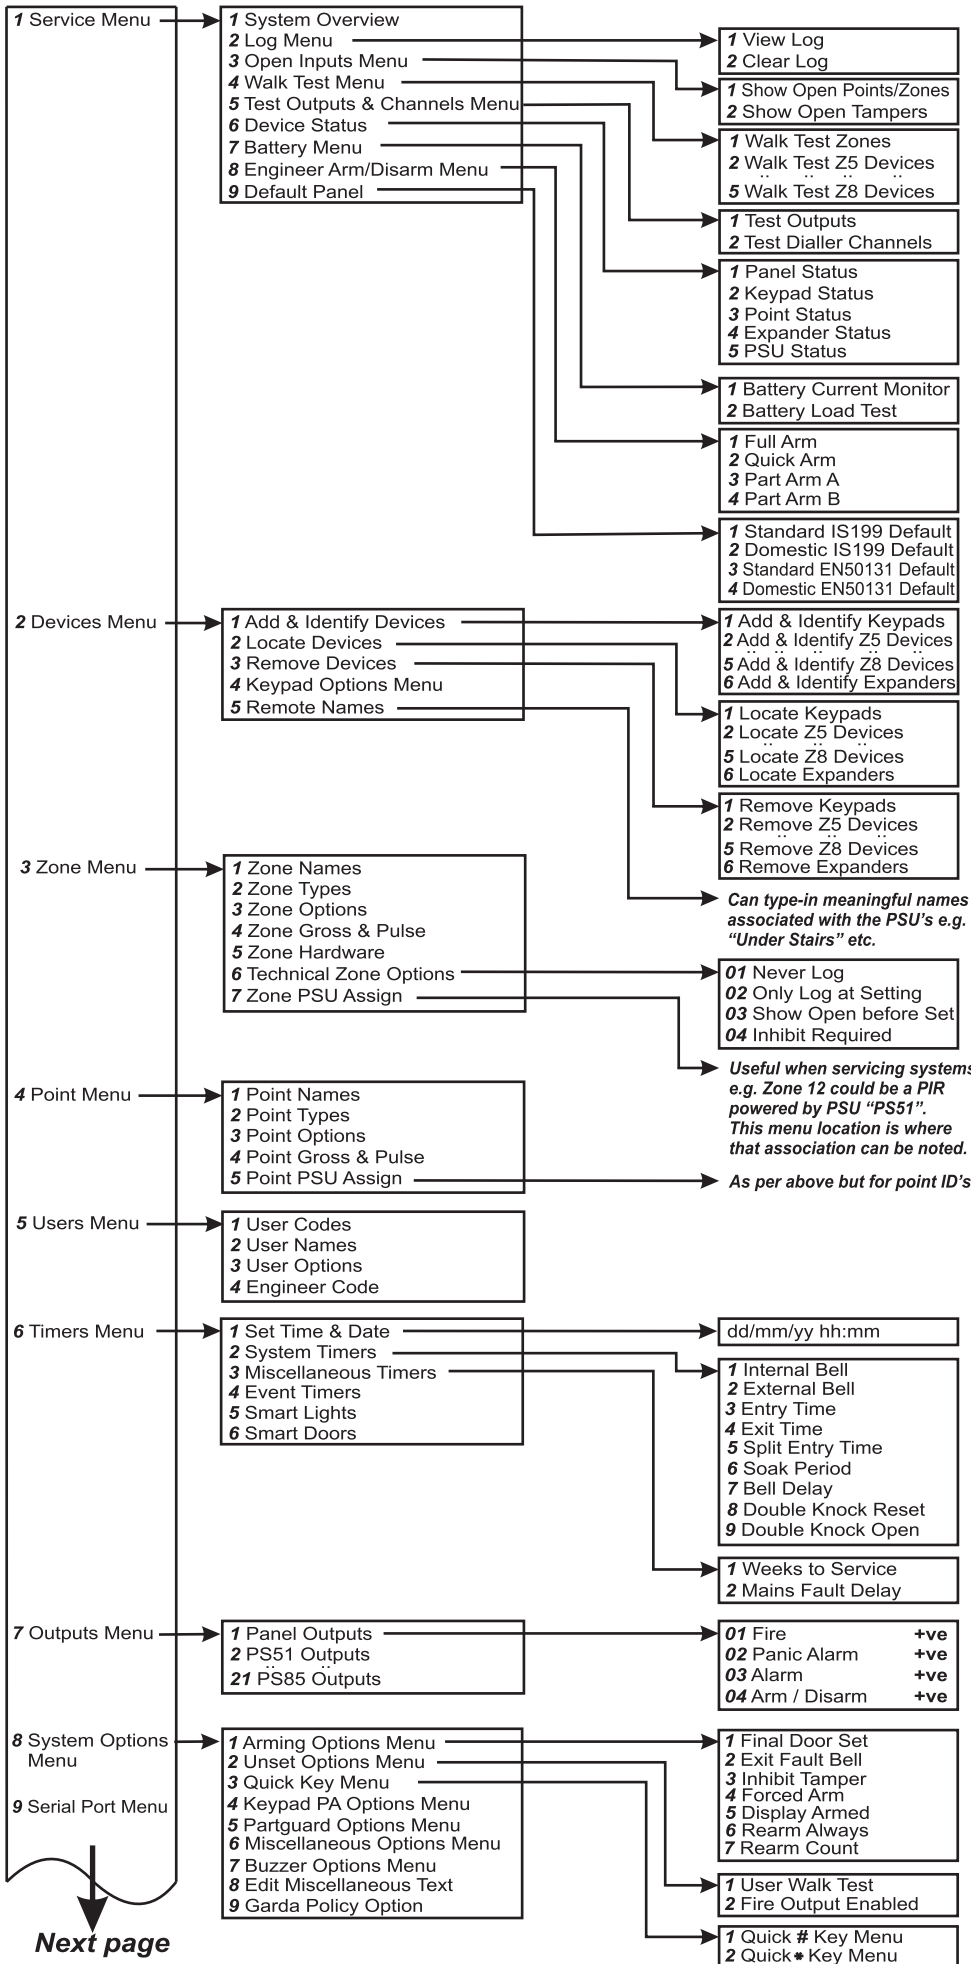

Next page

ZONE & POINT TYPES	
Alarm	Line Fault
Entry/Exit	Fail To Communicate
Panic	Unused
Fire	Technical 1
Tamper	.. ..
Key	Technical 8

ZONE/POINT TYPES vs OPTIONS	
Alarm	Inhibit Access Excl. from PG A Excl. from PG B Double Knock Soak Chime 24 Hour Perimeter
Entry / Exit	Inhibit Excl. from PG A Excl. from PG B Soak Chime
Panic	Inhibit Soak Silent PA
Fire Tamper	Inhibit Soak
Key	Soak Key Pulse
Line Fault Fail To Communicate Technical	Inhibit Soak 24 Hour

USER OPTIONS	
Full Set	User Menu
Unset	Manager Menu
Inhibit	24 Hour
Partset A	Output Only
Partset B	


EVENT TIMER TYPES	
Unused	Auto-Arm PGA
Open/Closed	Auto-Arm PGB
Home Alone	Timed Access
Auto-Activate	User Alert
Auto-Arm Full	

SMART LIGHTS TYPES	
Unused	User Only
Zone Only	Zone & User

SMART DOOR TYPES	
Unused	User Only
Zone Only	Zone & User

OUTPUT OPTIONS	
Internal Bell	Technical 1
External Bell	.. ..
Alarm	Technical 8
Arm /Disarm	Line Fault
Fire	Mains Delay
Panic Alarm	Unexpected Open
Strobe	Unexpected Close
Light	Auto-activate
Partguard	User Alert
Latch	SmartLight
Fire Reset	SmartDoor
Perimeter	Pre-alarm
Tamper	Alarm Abort
Buzzer	Unused
Trouble	

QUICK KEY MENU	
0#1 User Log	0*1 SMS Engineers
0#3 Walk Test	0*2 SMS Log
0#4 Full Arm	0*3 Call PC
0#5 Quick Arm	0*4 PC Direct
0#6 Toggle Chime	0*5 User Check
0#7 Partguard A	0*6 Temporary User
0#8 Partguard B	0*7 Home Alone
0#9 Bell Test	

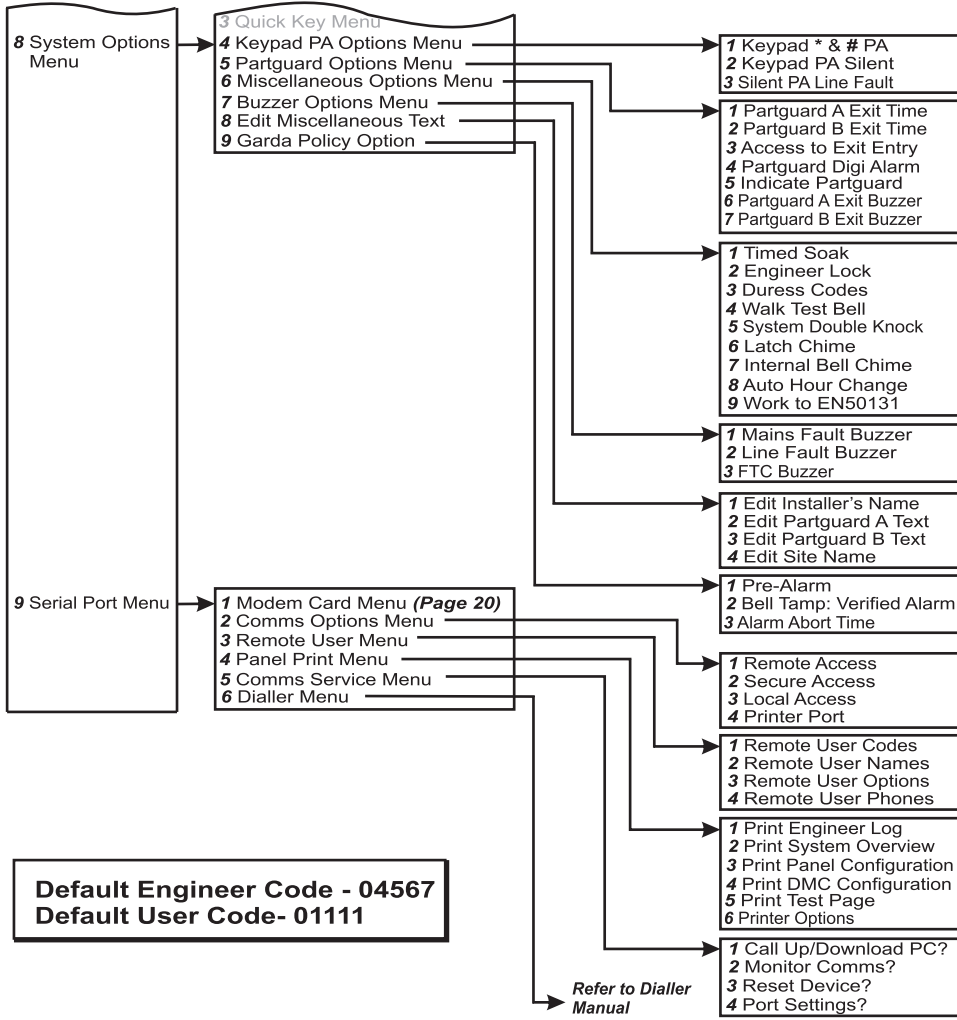

**MENU NAVIGATION**

Press **YES** key to enter a menu  
 Press **NEXT** key to go to next menu item  
 Press **PREV** key to go to previous menu item  
 Press **QUIT** key to exit a menu

**USING QUICK CODES**

To use quick codes simply key-in the codes indicated to the left of the items in the menus e.g. enter keys **821** from the main menu to access the **User Walk Test** option within the **Unset Options Menu** in the **System Option Menu**.

**REMOTE USER OPTIONS**

Call Back	Panel Control
Caller ID	Read User Data
Read Status	Write User Data
Read Setup	Remote Set
Write Setup	Remote Unset

**Default Engineer Code - 04567**  
**Default User Code - 01111**